

Syncing Your Wi-Fi Extenders

STEP 1: INITIATE WPS MODE ON YOUR ONT

- Locate your ONT
- On the bottom-right corner of the device, find the WPS button
- Press and hold the WPS button for approximately 5 seconds, until the WPS indicator light begins flashing orange/amber



Calix 854

STEP 2: CONNECT YOUR Wi-Fi EXTENDERS

- Identify your Wi-Fi extender(s)
- Confirm the first three LED indicators on the front panel are solid green
- On the back of the extender, press and hold the WPS button for 5 seconds
- Allow a few seconds for the WiFi Backhaul light to turn solid green, confirming a successful sync



Calix 804 Mesh

IMPORTANT!

If the orange WPS light on your ONT stops flashing before you initiate the connection on your extender, simply press and hold the ONT's WPS button again for 5 seconds to restart the process. Once complete, your extender is now successfully resynced and ready for use.